




60822278 - 11/07/23

PLANTILLA DE MONTAJE


ASSEMBLY INSOLE

PATRON DE MONTAGE


AFTEKENMAL

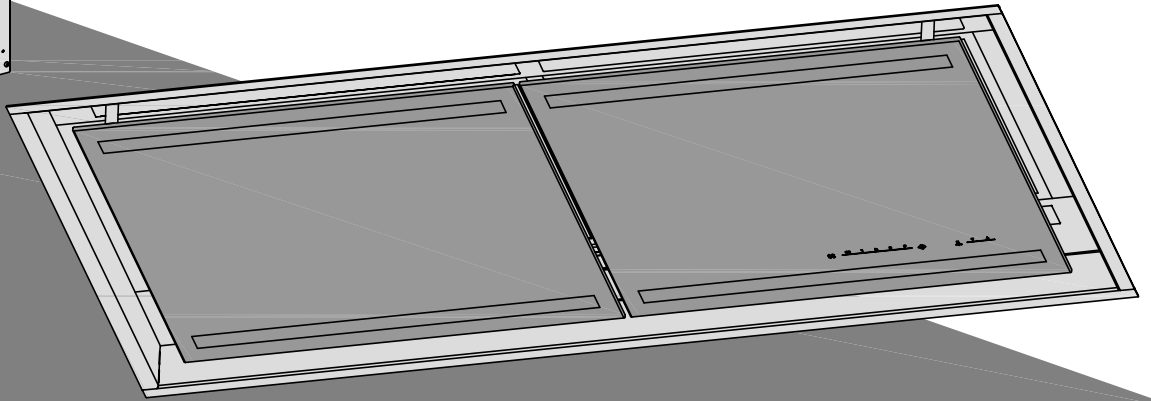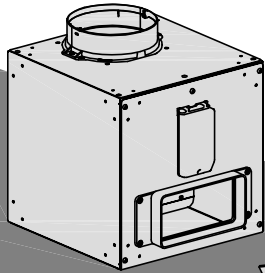


**a1** X 1



**a2** X 1



**a3** X 2




**a4** X 4



**a5** X 2



**a6** X 4



**a7** X 4



**a8** X 4



**a9** X 1




**b1** X 4

M6 x 400




**b2** X 1



**b3** X 4




**b4** X 16



**b5** X 8




**b6** X 3








**b7** X 4




**b8** X 1



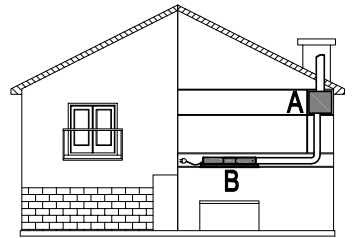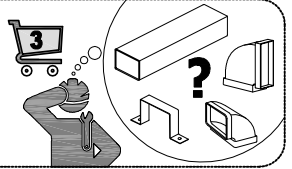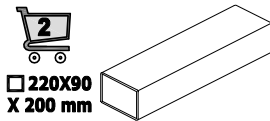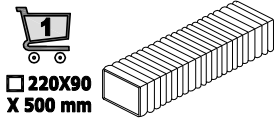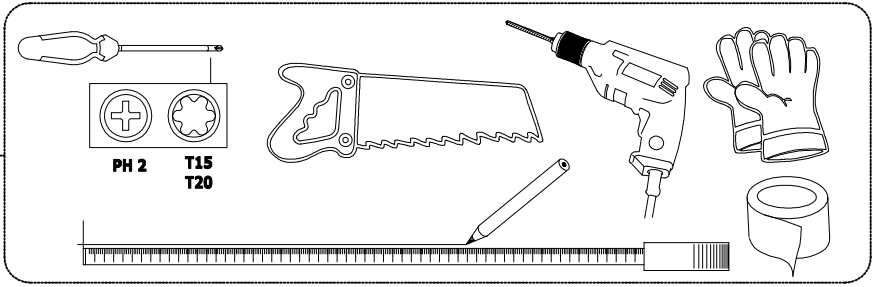


**A**

**B**

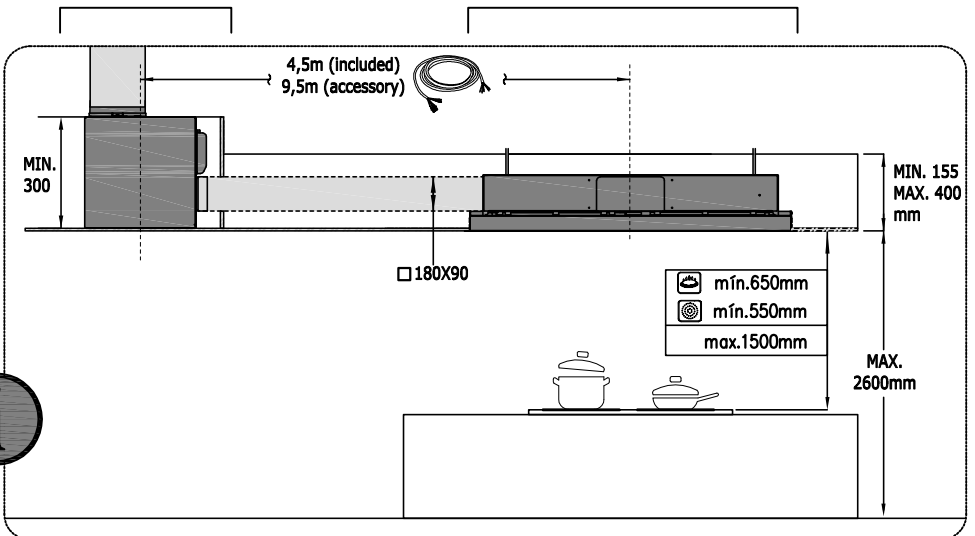




A

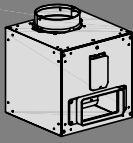

1


a5

a1

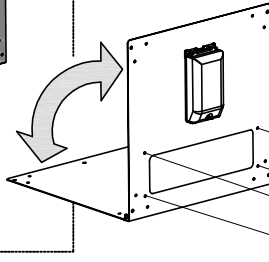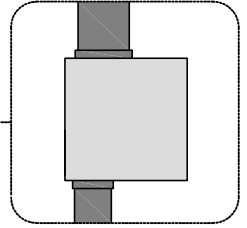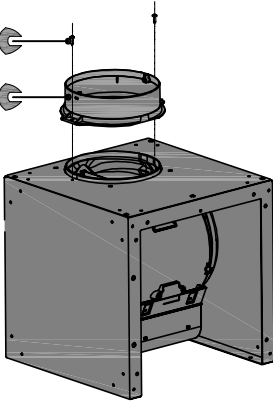

a2

a4

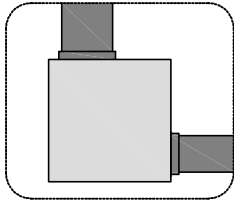

A



2

x6 a6

a3


a7

a8

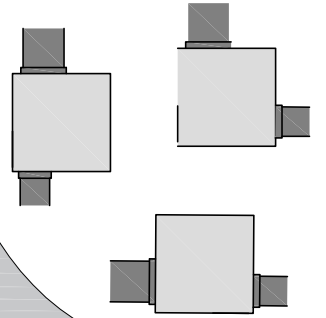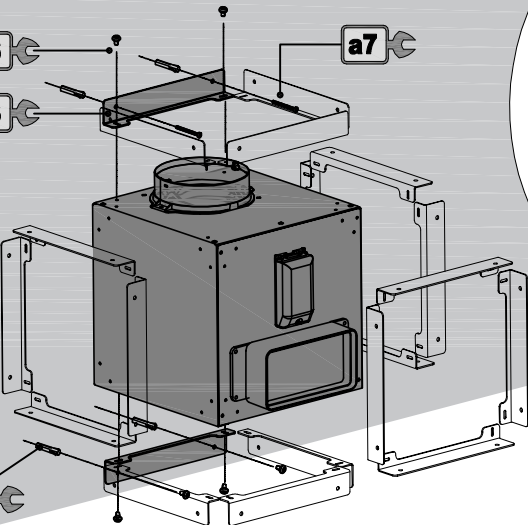


A

3

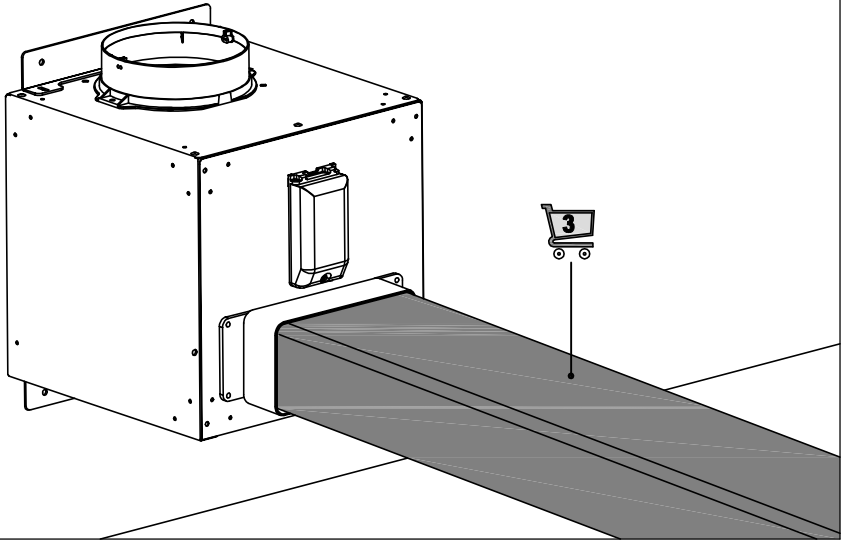


		 MIN. $\varnothing$ 200      MIN. $\varnothing$ 150 MIN. $120^\circ$	 L = MIN. 100mm
		 MIN. $\varnothing$ 200      MIN. $\varnothing$ 150 MIN. $120^\circ$	
		 $90^\circ$	 L < 100mm
		 $\varnothing$ 150/120	


4

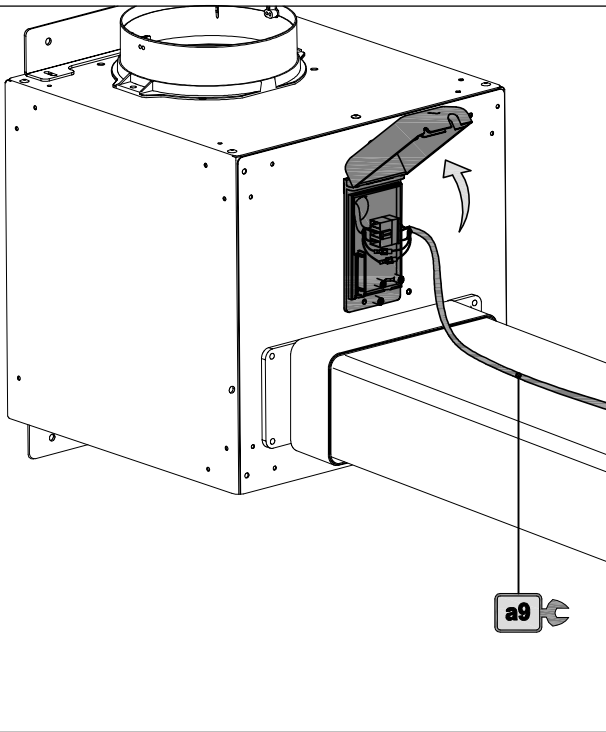



CONNECTION BOX

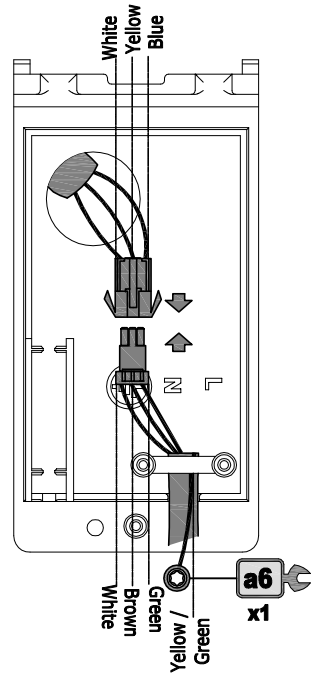


B



1


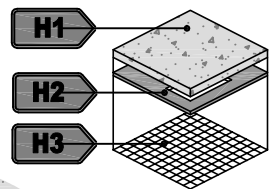
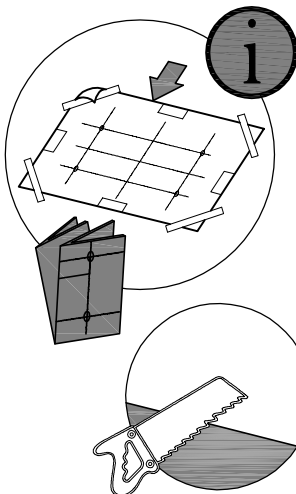


MIN. 155mm  
MAX. 400mm

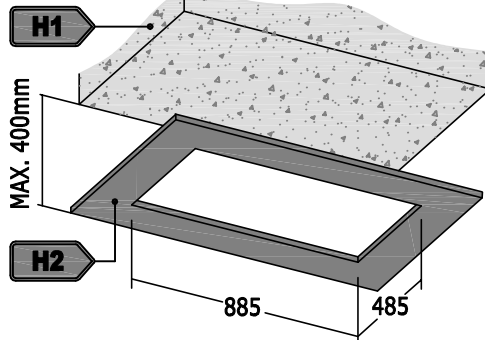




B

2

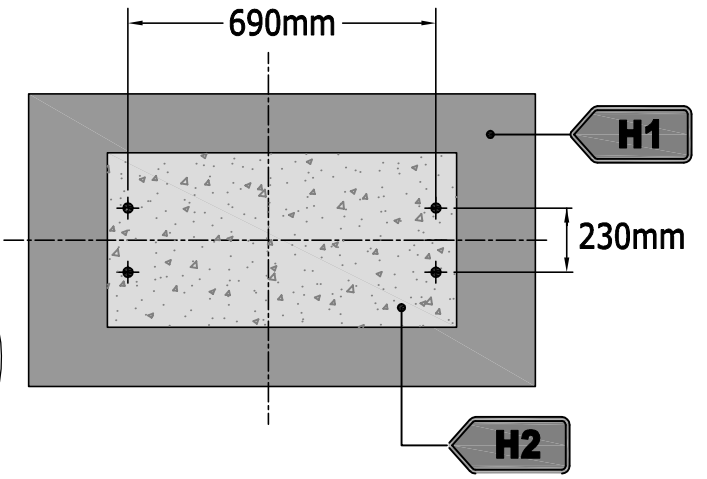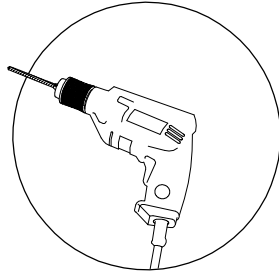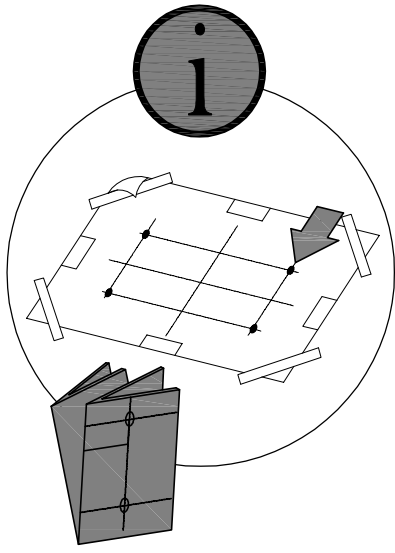


B

3

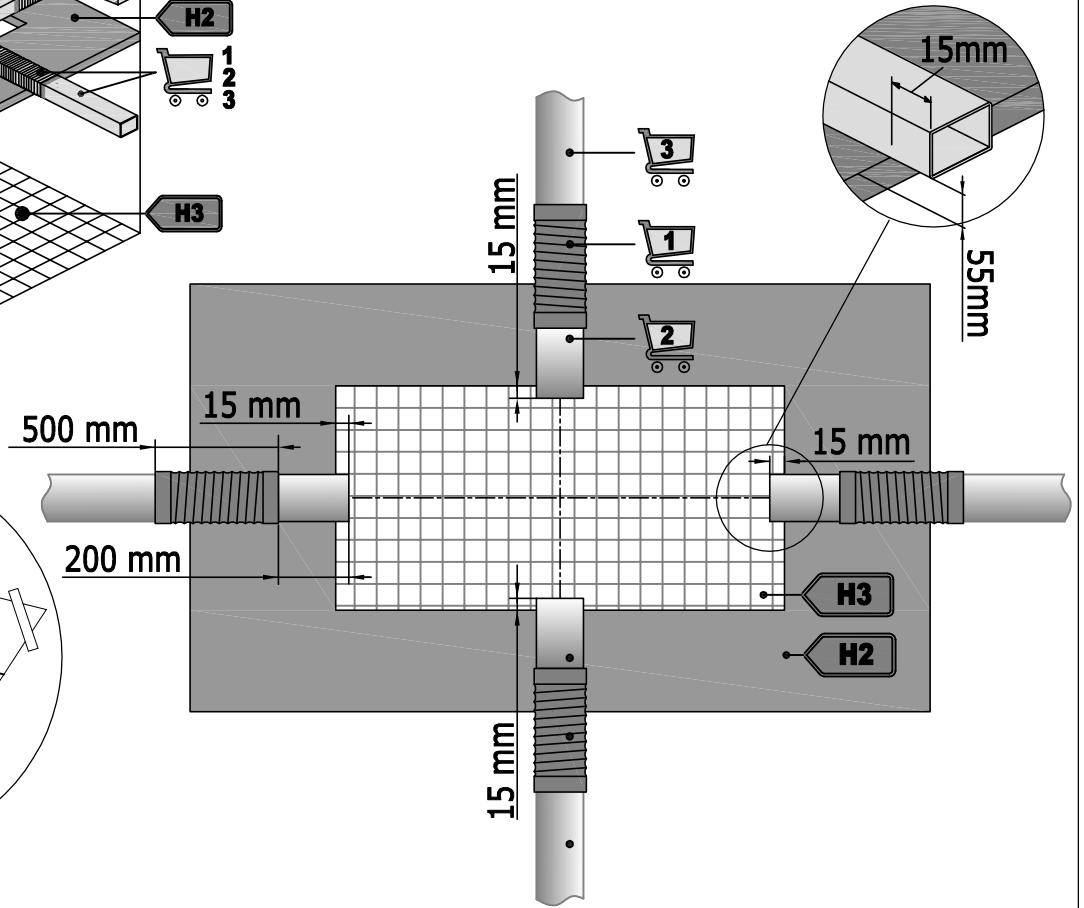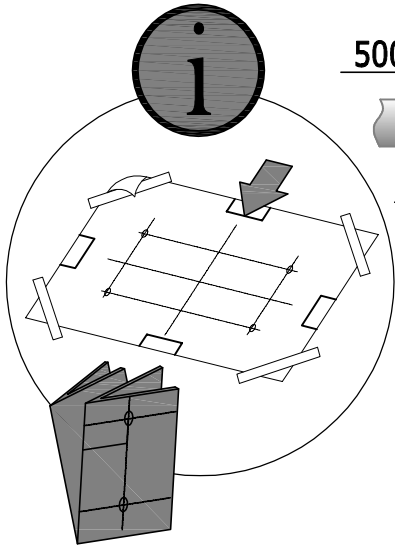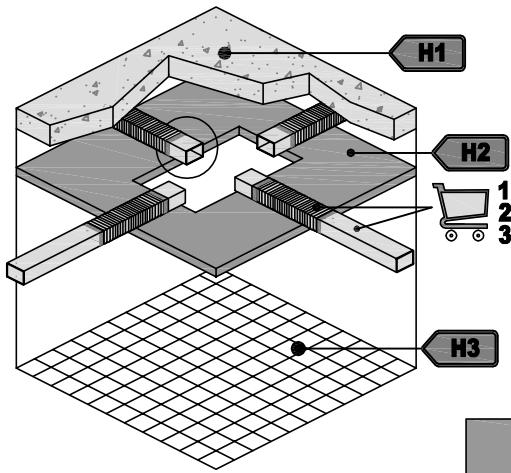


B

4

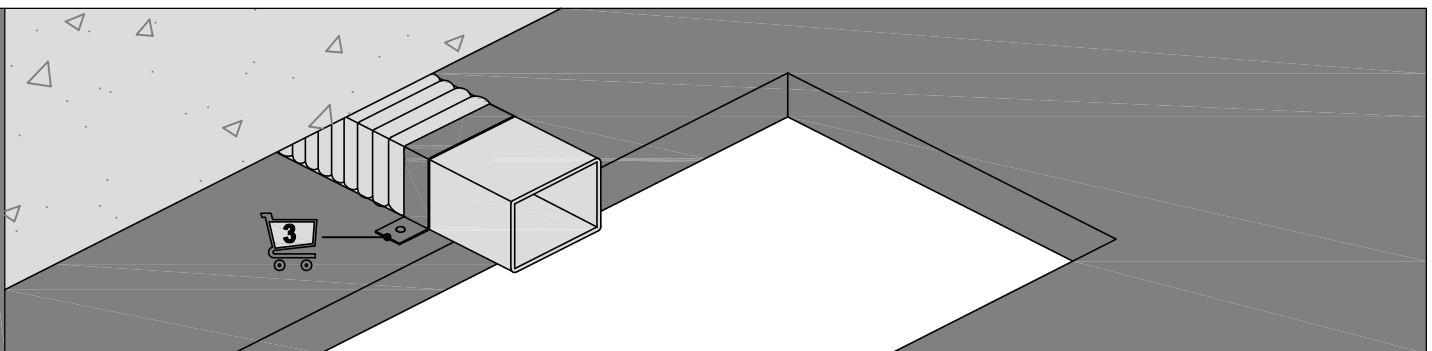


B


5




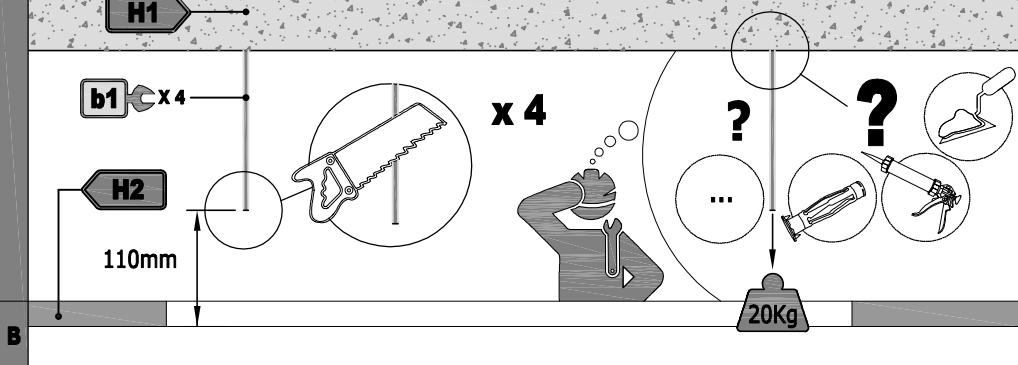


6

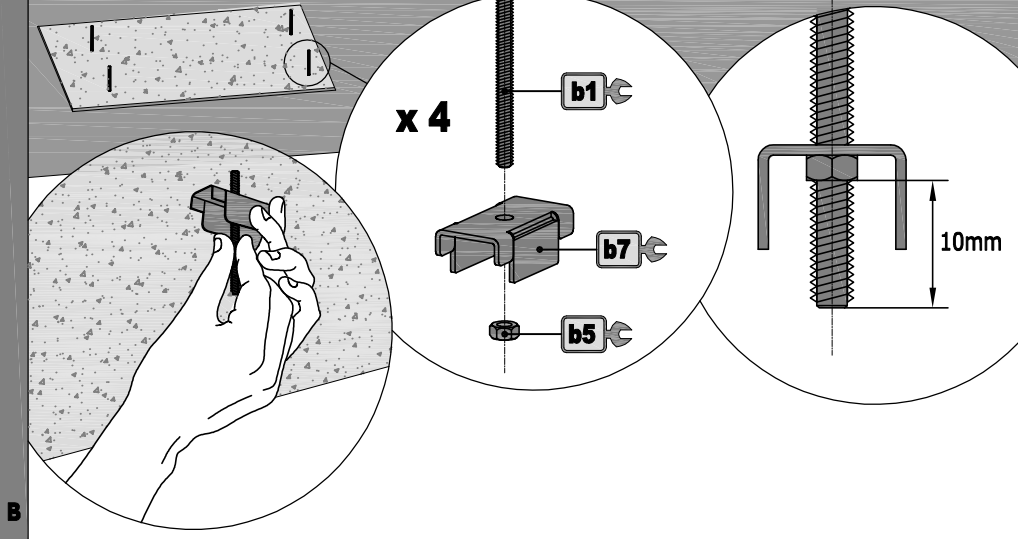





7

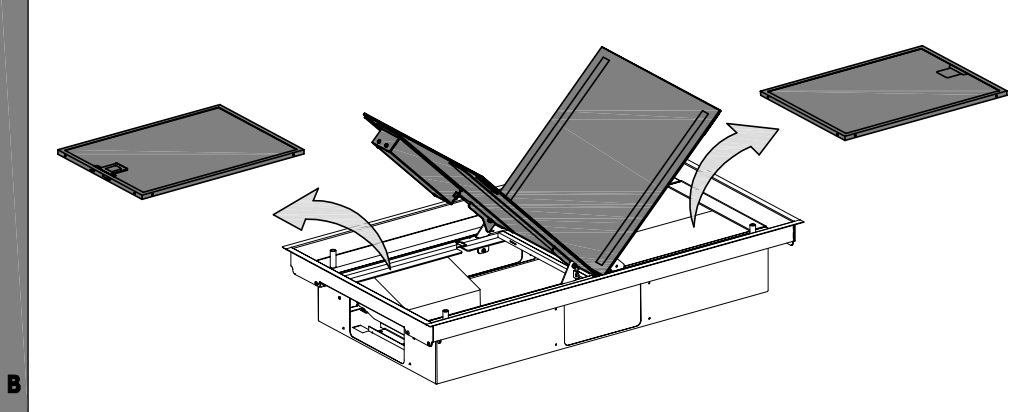

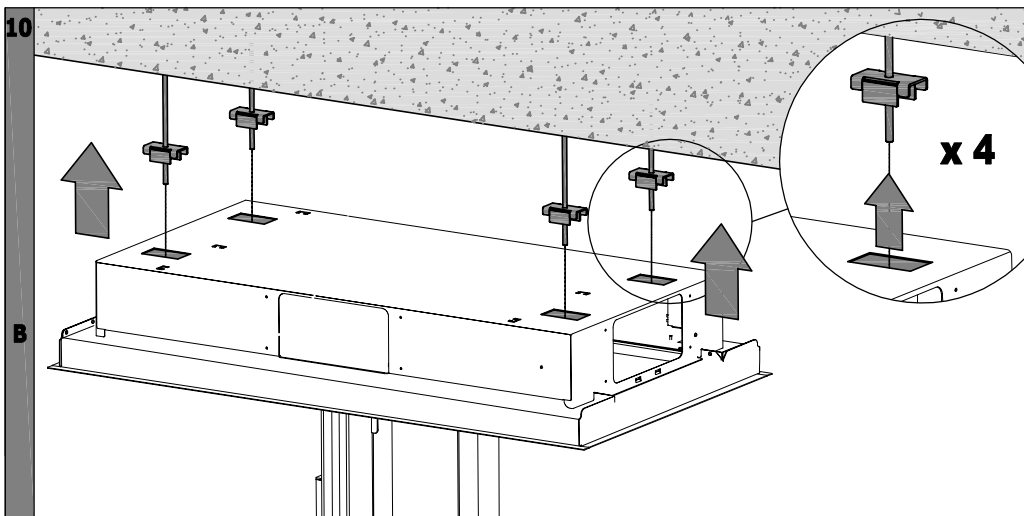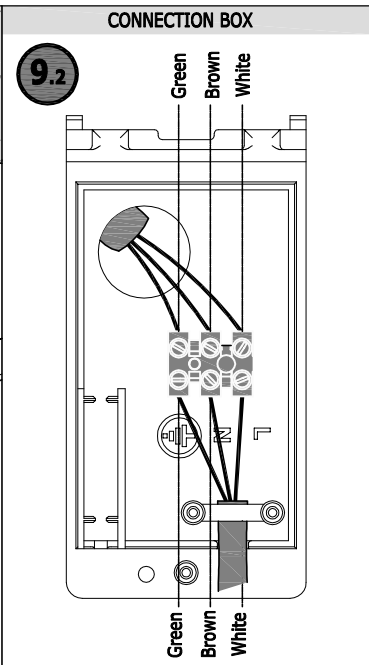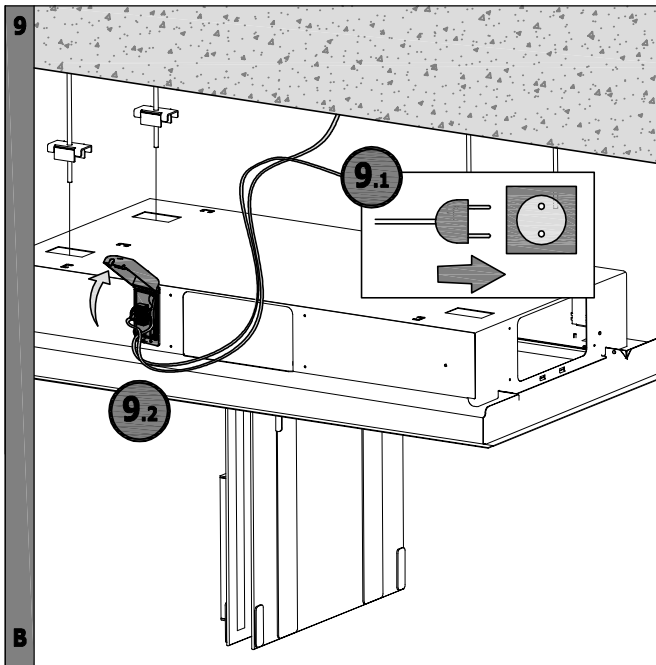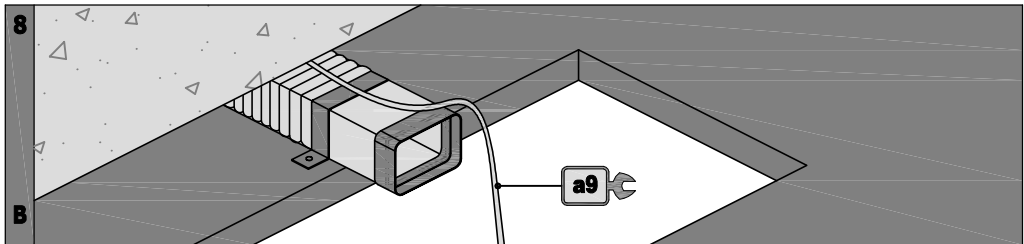




11

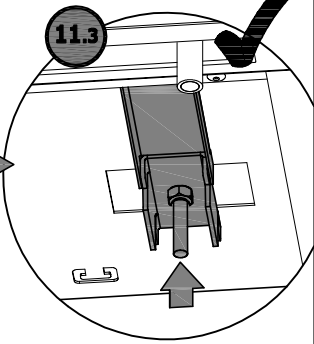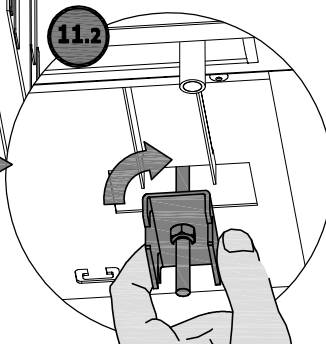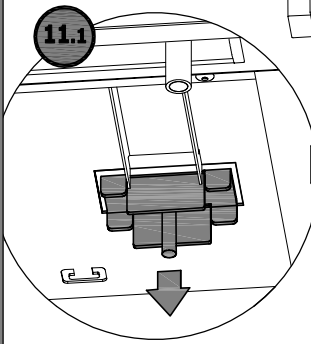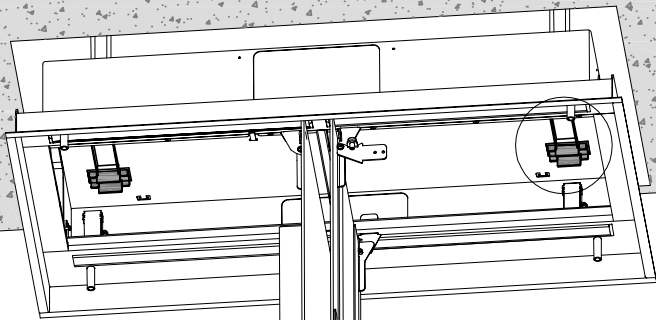


x 4

B


12

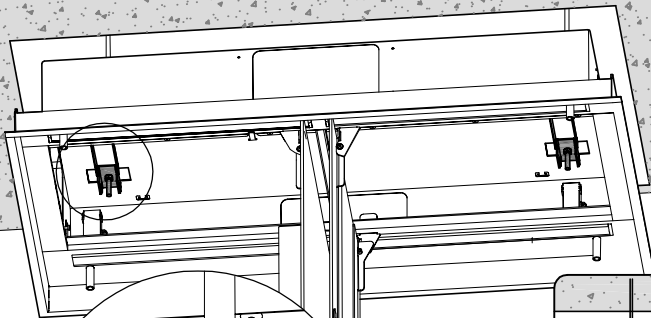


1

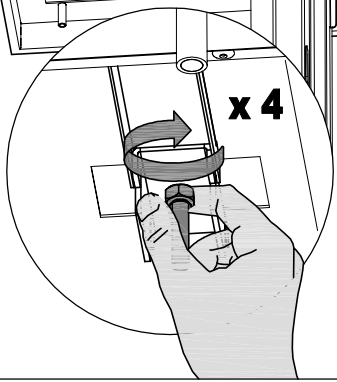

12.1

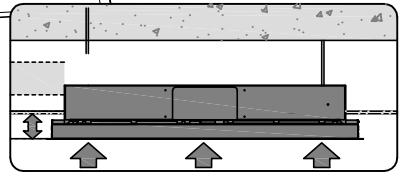


12.2

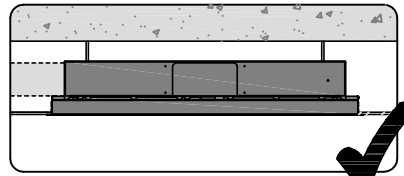

B


13

B




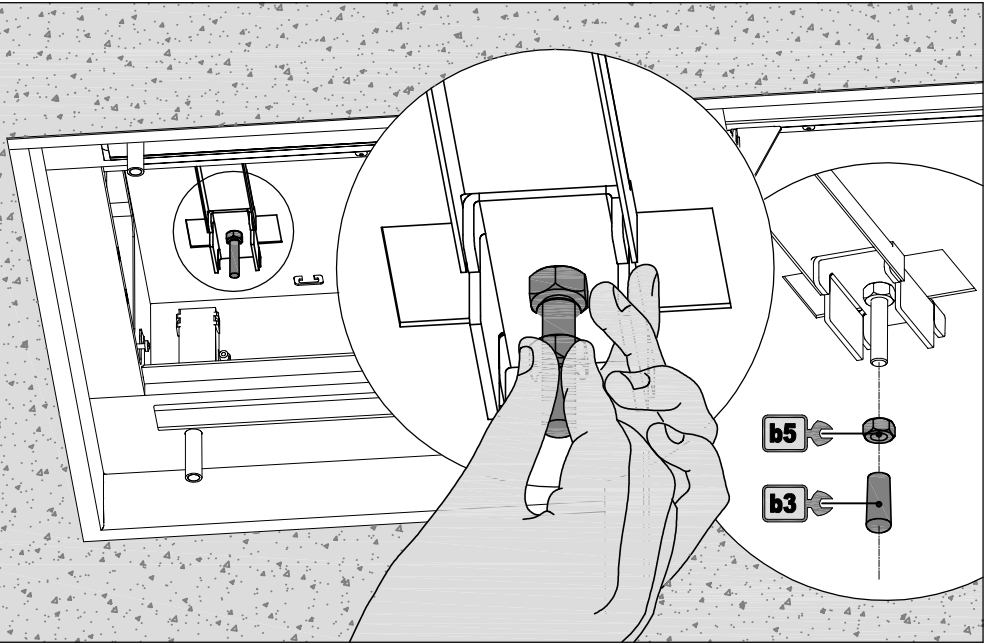


14



B

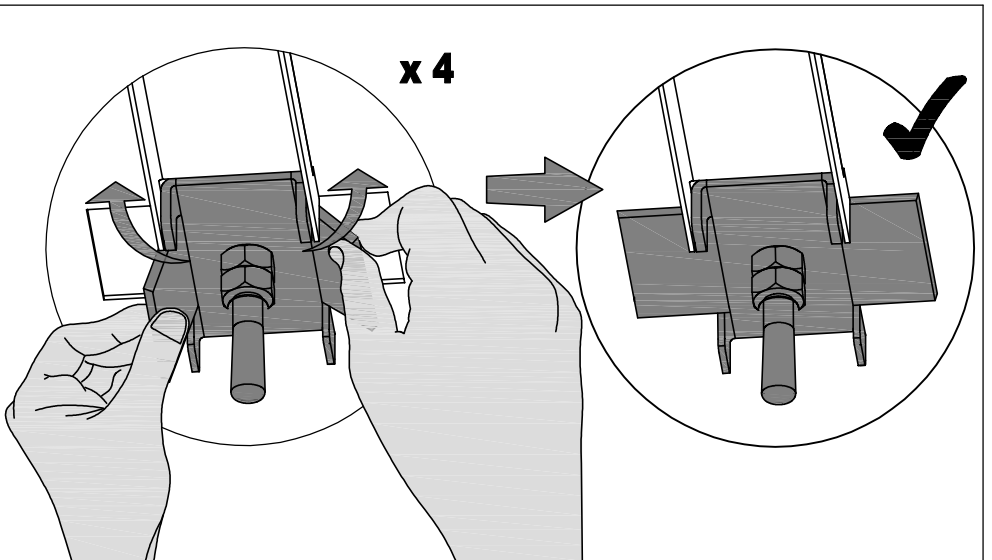

15

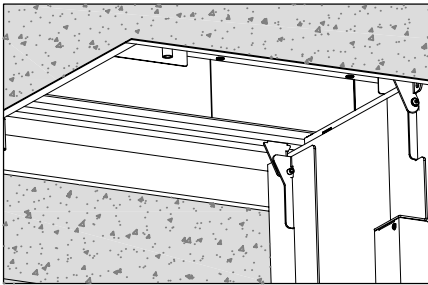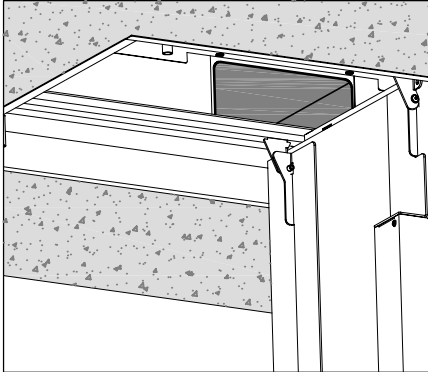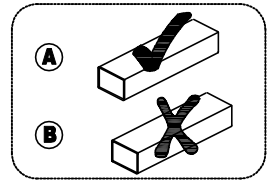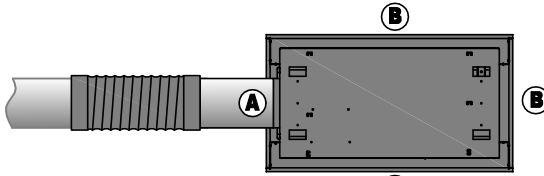

B

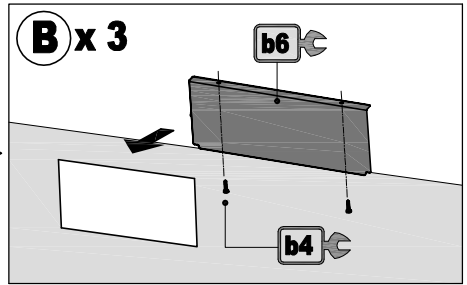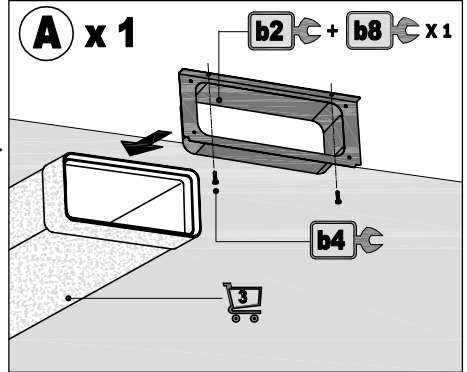

16

